

ML610Q482 Reference Board User's Manual

NOTICE

No copying or reproduction of this document, in part or in whole, is permitted without the consent of LAPIS Semiconductor Co., Ltd.

The content specified herein is subject to change for improvement without notice.

The content specified herein is for the purpose of introducing LAPIS Semiconductor's products (hereinafter "Products"). If you wish to use any such Product, please be sure to refer to the specifications, which can be obtained from LAPIS Semiconductor upon request.

Examples of application circuits, circuit constants and any other information contained herein illustrate the standard usage and operations of the Products. The peripheral conditions must be taken into account when designing circuits for mass production.

Great care was taken in ensuring the accuracy of the information specified in this document. However, should you incur any damage arising from any inaccuracy or misprint of such information, LAPIS Semiconductor shall bear no responsibility for such damage.

The technical information specified herein is intended only to show the typical functions of and examples of application circuits for the Products. LAPIS Semiconductor does not grant you, explicitly or implicitly, any license to use or exercise intellectual property or other rights held by LAPIS Semiconductor and other parties. LAPIS Semiconductor shall bear no responsibility whatsoever for any dispute arising from the use of such technical information.

The Products specified in this document are intended to be used with general-use electronic equipment or devices (such as audio visual equipment, office-automation equipment, communication devices, electronic appliances and amusement devices).

The Products specified in this document are not designed to be radiation tolerant.

While LAPIS Semiconductor always makes efforts to enhance the quality and reliability of its Products, a Product may fail or malfunction for a variety of reasons.

Please be sure to implement in your equipment using the Products safety measures to guard against the possibility of physical injury, fire or any other damage caused in the event of the failure of any Product, such as derating, redundancy, fire control and fail-safe designs. LAPIS Semiconductor shall bear no responsibility whatsoever for your use of any Product outside of the prescribed scope or not in accordance with the instruction manual.

The Products are not designed or manufactured to be used with any equipment, device or system which requires an extremely high level of reliability the failure or malfunction of which may result in a direct threat to human life or create a risk of human injury (such as a medical instrument, transportation equipment, aerospace machinery, nuclear-reactor controller, fuel-controller or other safety device). LAPIS Semiconductor shall bear no responsibility in any way for use of any of the Products for the above special purposes. If a Product is intended to be used for any such special purpose, please contact a ROHM sales representative before purchasing.

If you intend to export or ship overseas any Product or technology specified herein that may be controlled under the Foreign Exchange and the Foreign Trade Law, you will be required to obtain a license or permit under the Law.

Preface

This manual describes the ML610Q482 Reference Board.

The following manuals are also available. Read them as necessary.

- ML610Q482 User's Manual
Description on the ML610Q482
- uEASE User's Manual
Description on the on-chip debug tool uEASE.

1 . Overview

1.1 Features

ML610Q482ReferenceBoard is a board for evaluating the function of ML610Q482.

This board can connect the pin of ML610Q482 with a user application system, it can perform the check of a system of operation easily.

By using the board with "on-chip debug emulator" (hereinafter referred to "uEASE") not only Software debugging but also writing Flash ROM in the devices are capable.

The hardware specification of this board is shown below.

Embedded microcontroller	<ul style="list-style-type: none">• U1: ML610Q482 (The part name is labeled on the solder side of the board.)
Embedded parts	<ul style="list-style-type: none">• XT, C2, C3: 32.768KHz resonator and capacitors
	<ul style="list-style-type: none">• PWR: Jumper for input power supply switch (3pin pin-header and short pin)
	<ul style="list-style-type: none">• CNUE: Connector for uEASE (14pin connector)
	<ul style="list-style-type: none">• C1, C6-C9: Capacitors for power supply and LCD bias generation circuit
Pads for mounting	<ul style="list-style-type: none">• CNU1 to CNU4: Pads for peripheral board connectors (34pin x 4, 2.54mm pitch)
	<ul style="list-style-type: none">• IN0, CS0, RCT0, RS0, RT0, CVR0, RT1, RS1, CS1, IN1, CVR1: Pads for RC oscillation type ADC parts
	<ul style="list-style-type: none">• SP1 to SP13: Pads for opening or short (1608 type)
	<ul style="list-style-type: none">• X2, C4, C5: Pads for mounting high-speed clock oscillation circuit parts
Power supply pads	<ul style="list-style-type: none">• DVDD, GND
Monitor pads	<ul style="list-style-type: none">• RCM: RC oscillation monitor
Operating voltage	<ul style="list-style-type: none">• +1.1V to +3.6V
Board size	<ul style="list-style-type: none">• 71.12 x 60.96 mm

This board is made on the assumption that it is used mounting in the user application board.

There is a possibility of short the circuit when using it on electroconductive so that the board may have the pattern on the solder side.

Therefore, please use the board on nonconductivity or put the protection parts on the solder side if necessary.

1.2 PCB outline drawing

2. Function

2. 1 PWR Jumper (a. PWR)

This is a jumper which input power supply.

When supplying from uEASE, PWR jumper is set to the uE side.

The ability to supply power of the uEASE is +3.3V/100mA.

When supplying from CNU4_1pin and CNU4_2pin, PWR jumper is set to the USR side.

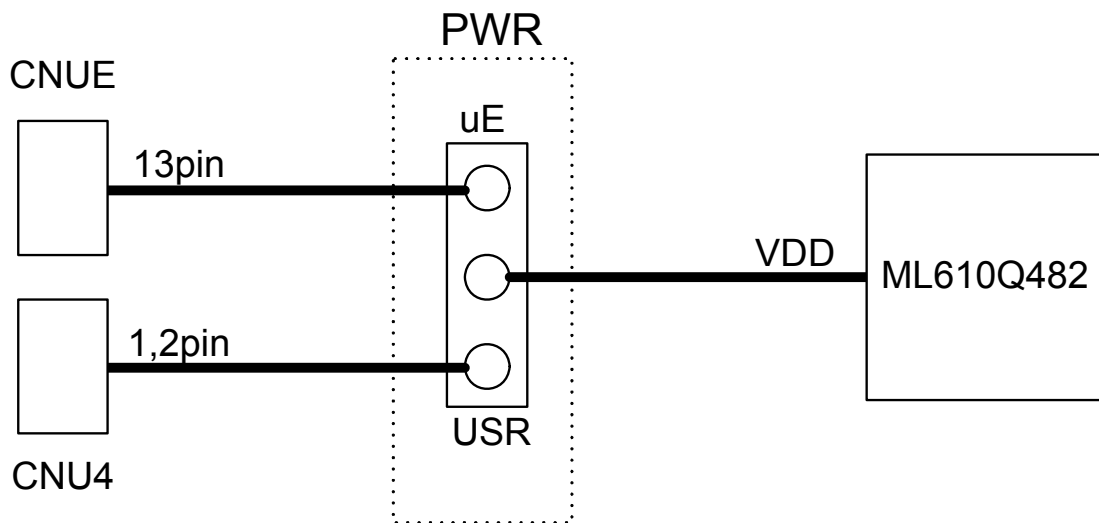


Fig.2 The connection of PWR jumper

【Note】

Notes when the PWR jumper is set to USR side and the uEASE is connected.

Turn on the power supply of the peripheral board after starting the uEASE.

Moreover, Stop the uEASE after turning off the power supply of the peripheral board.

2. 2 When you use RC_ADC0 (b. RC_ADC0)

- (a) Please cut each short pattern of SP1, SP2, SP3, SP4 and SP5 that is on the back side of this board.
If each short pattern is not cut, the RC-ADC0 converter may not have accurate conversion result under the influence of the noise. Please be sure the cut each short pattern.
- (b) Please mount parts on the each pad of the IN0, CS0, RCT0, RS0, RT0 and CVR0 pads.
Refer to ML610Q482 User's Manual for the parts to mount.

The example of processing is shown below.

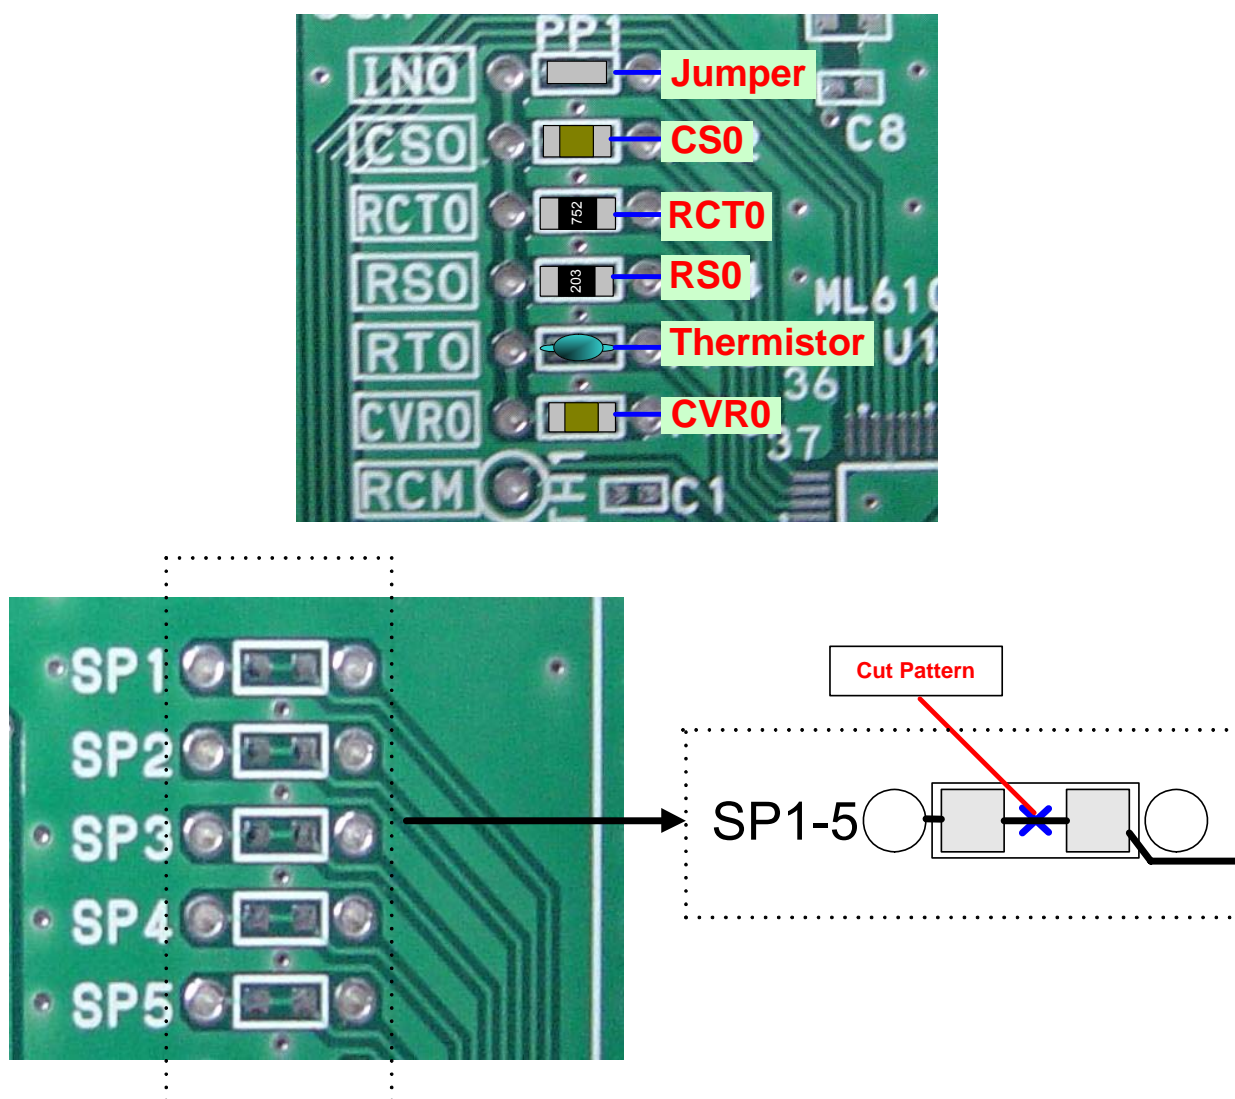


Fig.3 The example of processing of RC_ADC0

2. 3 When you use RC_ADC1 (c. RC_ADC1)

- (a) Please cut each short pattern of SP9, SP8, SP7 and SP6 that is on the back side of this board.
If each short pattern is not cut, the RC-ADC1 converter may not have accurate conversion result under the influence of the noise. Please be sure the cut each short pattern.
- (b) Please mount parts on the each pad of the IN1, CS1, RS1, RT1 and CVR1 pads.
Refer to ML610Q482 User's Manual for the parts to mount.

The example of processing is shown below.

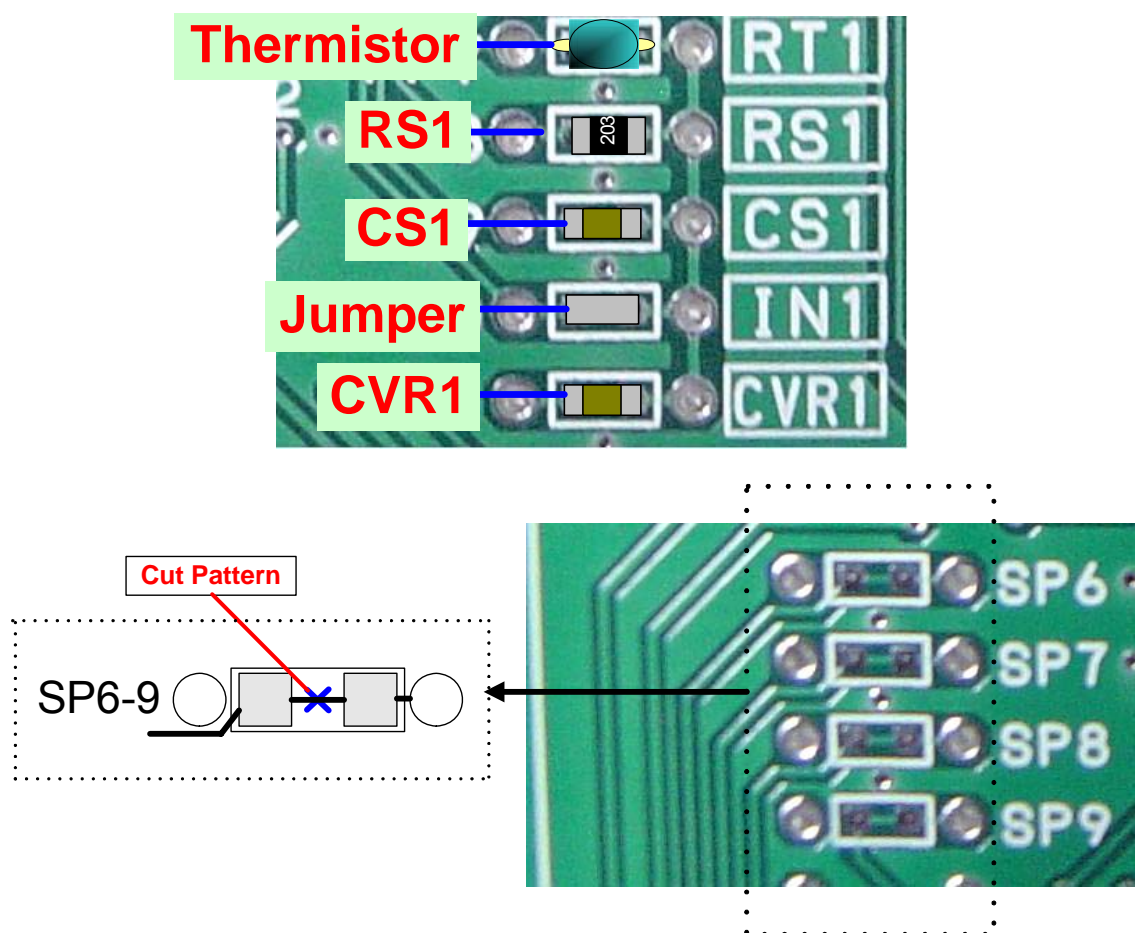


Fig.4 The example of processing of RC_ADC1

2. 4 When you use Analog Comparator (d. Analog Comparator)

CMPP is wired with VDD through SP12. Please cut the short pattern of the SP12 when you use CMPP
CMPM is wired with VDD through SP13. Please cut the short pattern of the SP13 when you use CMPM
If each short pattern is not cut, the power supply might be damaged with the short pattern.

The example of processing is shown below.

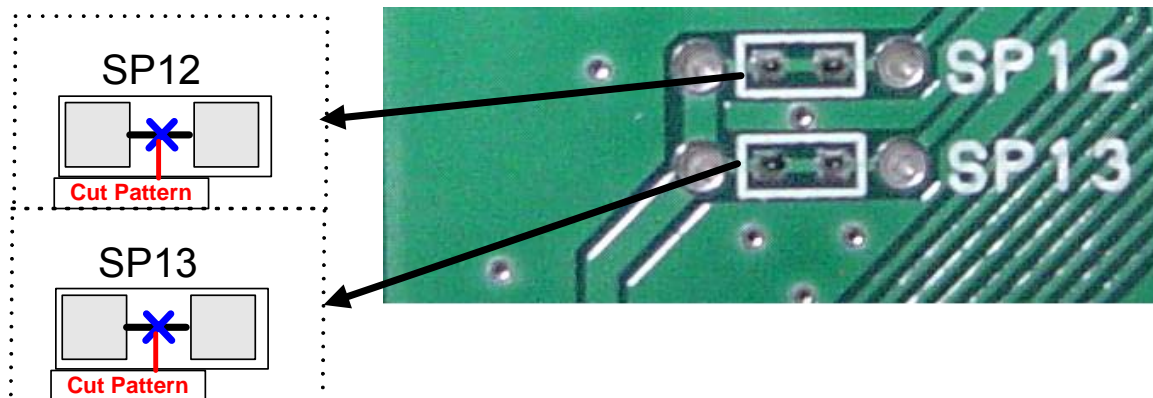


Fig.5 The example of processing of SP12 and SP13

2. 5 When you use the high-speed clock generation circuit (e. High-speed clock)

Please mount parts on the each pad of the X2, C4 and C5 pads.
Please cut each short pattern of SP10 and SP11 if you need.

The example of processing of the high-speed clock generation circuit is shown below.

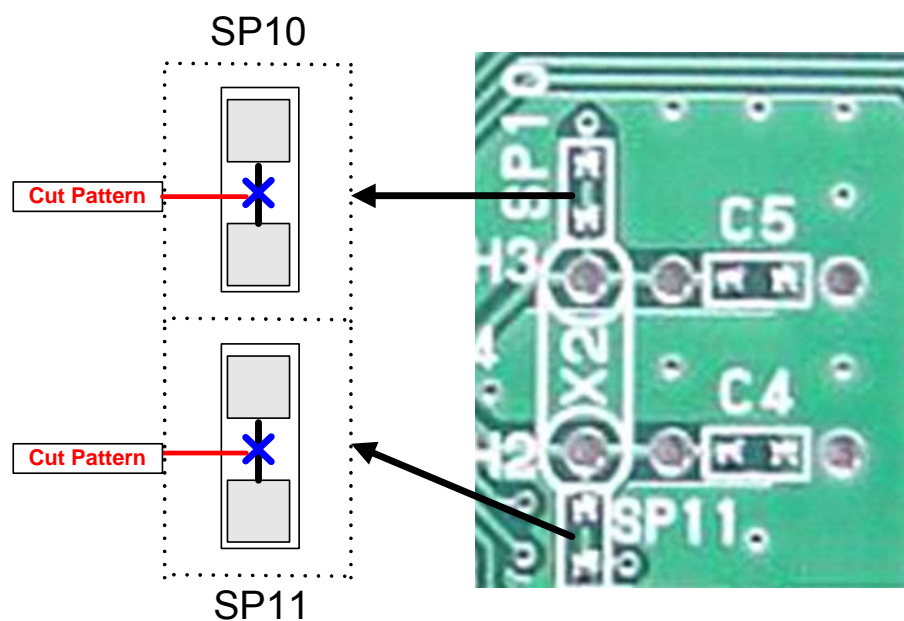


Fig.6 The example of use the high-speed clock generation circuit

3. User Interface

3. 1 The user interface of ML610Q482ReferenceBoard


Table1 shows the user interface of reference board which mounted ML610Q482.

Table 1 CNU1-4 of ML610Q482ReferenceBoard

Pin	CNU1	CNU2	CNU3	CNU4
1	P03	PA0	N.C	VDD
2	P02	PA1	N.C	VDD
3	P01	PA2	N.C	N.C
4	P00	PA3	N.C	N.C
5	NMI	PA4	N.C	N.C
6	P20	PA5	N.C	N.C
7	P21	PA6	N.C	N.C
8	P22	PA7	N.C	N.C
9	P40	N.C	N.C	N.C
10	P41	N.C	N.C	N.C
11	N.C	N.C	N.C	N.C
12	P42	N.C	N.C	N.C
13	P43	N.C	N.C	N.C
14	P44	N.C	N.C	N.C
15	P45	N.C	N.C	N.C
16	P46	N.C	N.C	N.C
17	P47	N.C	N.C	N.C
18	P30	N.C	N.C	N.C
19	P31	N.C	N.C	N.C
20	P32	N.C	N.C	N.C
21	P33	N.C	N.C	N.C
22	P34	N.C	N.C	N.C
23	P35	N.C	N.C	N.C
24	N.C	N.C	N.C	N.C
25	N.C	N.C	N.C	N.C
26	N.C	N.C	N.C	N.C
27	CMPP	N.C	N.C	N.C
28	CMPM	N.C	N.C	N.C
29	N.C	N.C	N.C	N.C
30	P24	N.C	N.C	N.C
31	P10	N.C	N.C	N.C
32	P11	N.C	RESET_N	N.C
33	VSS	VSS	VSS	VSS
34	VSS	VSS	VSS	VSS

4. Schematics and PCB dimensional drawing

The this board schematics and the demensional drawing are shown as follows.

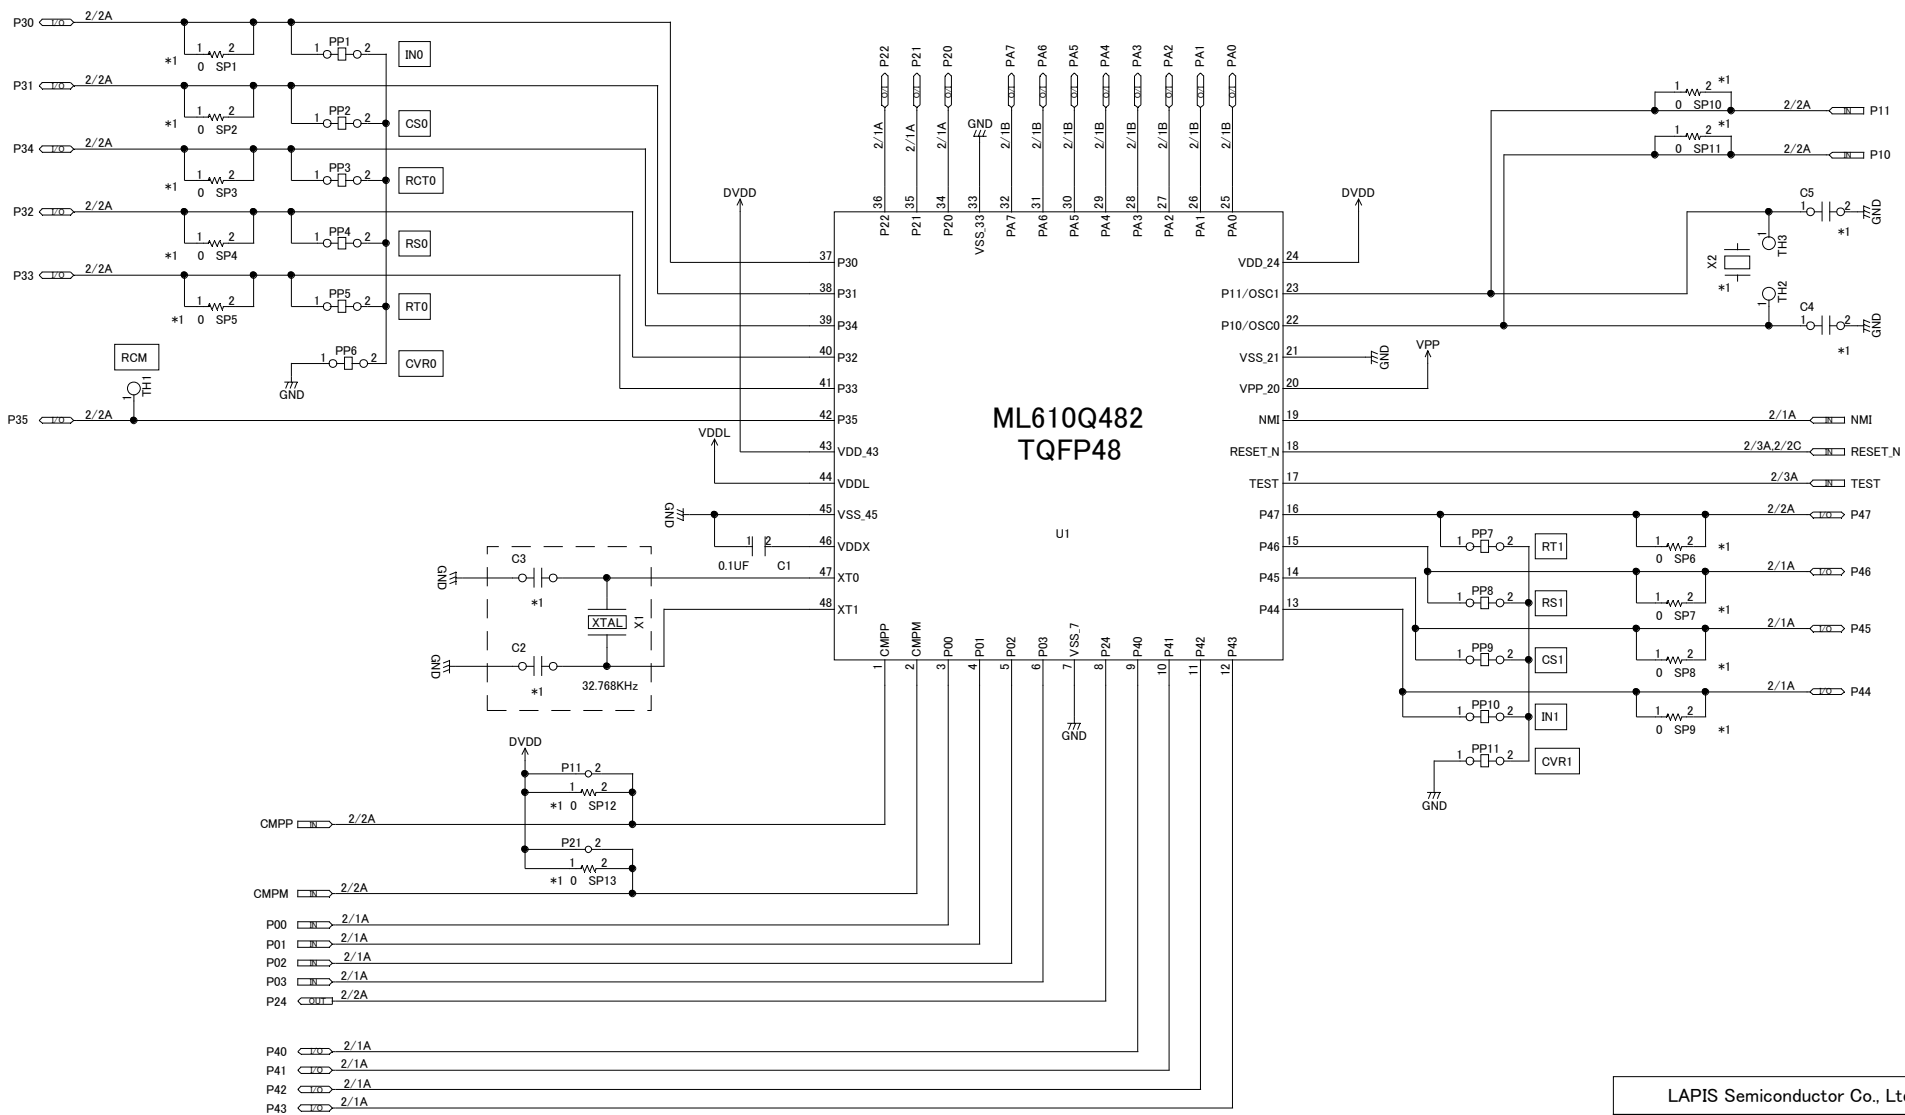

*1: Unmounted

LAPIS Semiconductor Co., Ltd.

TITLE ML610Q482 Reference Board

APPLICATION ML610Q482


DWG NO QTU-11603

DRAWN By

SHEET

1 of 2

REV 1.0

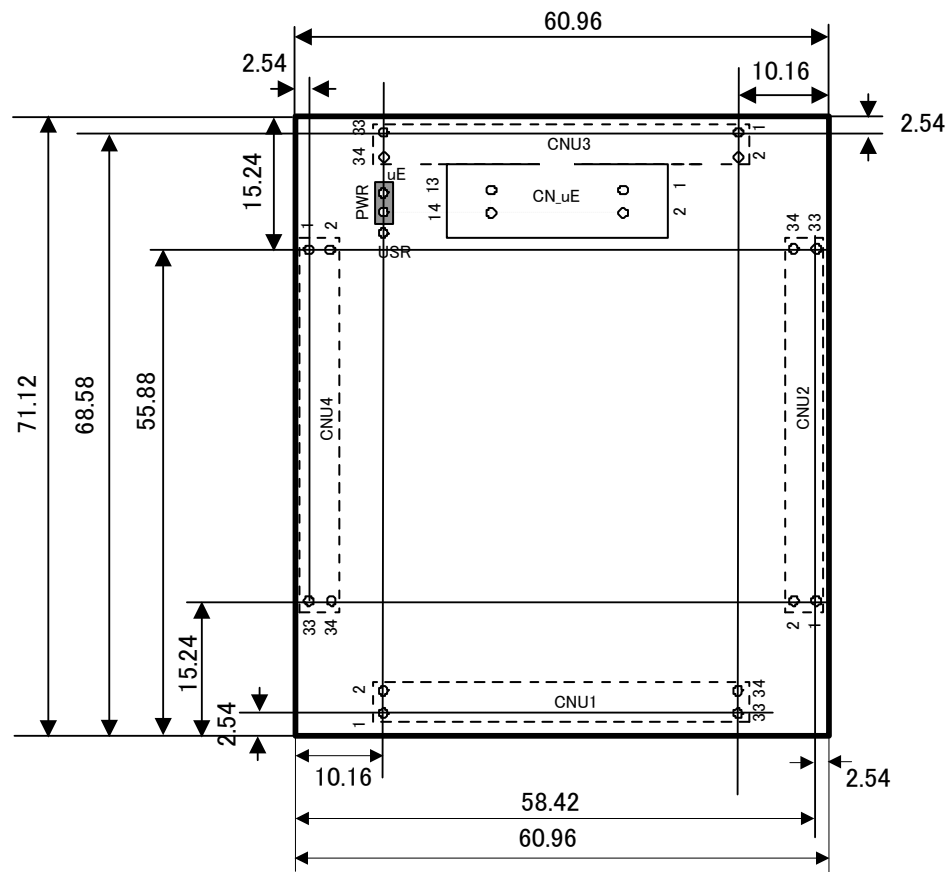

ML610Q4xx Reference Board TOP_VIEW

LAPIS Semiconductor Co.,Ltd.

**ML610Q4xx Reference Board
Dimensional drawing**